



序号:

- 1) 中间压力为接1/4"SAE-FLARE
- 2) 低压接口1/8"NPT
- 3) 高压接口1/4"SAE-FLARE
- 4) 曲轴箱加热器
- 5) 油过滤器
- 6) 油分离器1/4"NPT
- 7) 油平衡管11 (并联运行) 1/2"NPT
- 8) 气平衡管11 (并联运行) 3/4"NPT
- 9) 油出口1/4"NPT
- 10) 前高压接口1/4"SAE-FLARE
- 11) 前低压接口1/4"SAE-FLARE
- 12) 回油口(接油杯) 1/8"NPT
- 13) 吸气截止阀
- 14) 排气截止阀
- 15) 油视镜
- 16) 中冷器

Key:

- 1) Intermediate pressure 1/4"SAE-FLARE
- 2) Low pressure 1/8"NPT
- 3) High pressure 1/4"SAE-FLARE
- 4) Crankcase heater
- 5) Oil strainer plug
- 6) Oil drain 1/4"NPT
- 7) Oil equalization(parallel operation)1/2"NPT
- 8) Gas equalization(parallel operation)3/4"NPT
- 9) Oil charging 1/4"NPT
- 10) Oil high pressure 1/4"SAE-FLARE
- 11) Oil low pressure 1/4"SAE-FLARE
- 12) Oil return from separator 1/8"NPT
- 13) Suction shut-off valve
- 14) Discharge shut-off valve
- 15) Oil sight glass
- 16) Plate heat exchanger