


型号/Type	Φ i A	Φ i B
SP4L F0600/060E	22-7/8"	28-1 1/8"
SP4L F0800/080E	28-1 1/8"	35-1 3/8"
SP4L F1000/100E	28-1 1/8"	35-1 3/8"
SP4L F1200/120E	28-1 1/8"	35-1 3/8"
SP4HF1000/100E	22-7/8"	28-1 1/8"
SP4HF1200/120E	28-1 1/8"	35-1 3/8"

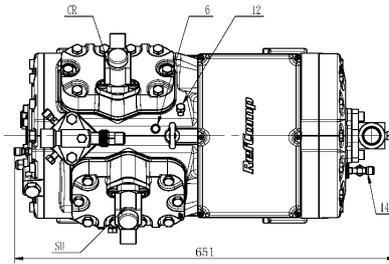

图例:

- 1) 电子油压差开关接口
- 2) 排气温度传感器接口1/8"NPT
- 3) 高压接口 1/8"NPT
- 4) 油高压侧接口 1/4"SAE-FLARE
- 5) 油低压侧接口 1/4"SAE-FLARE
- 6) 低压接口 1/8"NPT
- 7) 油过滤器M22x1.5
- 8) 排油堵3/8"NPT
- 9) 曲轴箱加热器
- 10) 注油1/4"NPT
- 11) 油位视镜
- 12) LCM喷液接口1/8"NPT
- 13) 接线盒
- 14) 低压接口1/4"SAE-FLARE

Key:

- 1) Electronic oil pressure switch connection
- 2) Discharge temperature sensor 1/8"NPT
- 3) High pressure 1/8"NPT
- 4) Oil high pressure 1/4"SAE-FLARE
- 5) Oil low pressure 1/4"SAE-FLARE
- 6) Low pressure 1/8"NPT
- 7) Oil strainer plug M22x1.5
- 8) Oil drain 3/8"NPT
- 9) Crankcase heater
- 10) Oil charging 1/4"NPT
- 11) Oil sight glass
- 12) LCM injection connection 1/8"NPT
- 13) Electrical box
- 14) Low pressure 1/4"SAE-FLARE

- DL) Discharge shut-off valve
 SL) Suction shut-off valve
 CR) Capacity regulator
 SU) Start unloader